



Before using your tumble dryer, please read this manual carefully and keep it for future reference.



CAUTION: HOT SURFACE !



CAUTION: RISK OF FIRE !



Manual

TTD-7

Torktumlare
Tumble dryer

SE ANVÄNDARHANDBOK
GB USER MANUAL

Bruksanvisning (SE).....	3
1. Specifikation.....	3
2. Säkerhetsföreskrifter.....	3
3. Konstruktion	5
Snabbstart.....	6
4. Installation.....	6
5. Anvisningar & Råd.....	7
6. Användning.....	8
7. Rengöring och underhåll.....	10
8. Felsökning.....	11
9. Garantivillkor.....	12
10. Miljöskydd	12
11. Programtabell.....	13
EU-information.....	14
Directions for Use (GB)	15
1. Specification.....	15
2. Safety information.....	15
3. Design	17
4. Installation.....	18
5. Attention & Advice	19
6. Operation.....	20
Control Panel.....	20
7. Cleaning and maintenance.....	22
8. Troubleshooting	23
9. Warranty Provisions	24
10. Environmental Protection.....	24
11. Program table	25
EU-information.....	26

SE Funktionerna i denna bruksanvisning publiceras med reservation för ändringar.
GB The features described in this manual are published with reservation to modifications.

Bruksanvisning (SE)

Läs denna bruksanvisning noggrant innan du använder produkten.
Spara bruksanvisningen för framtida behov.













1. Specifikation

Modell nr.	TTD-7
Beskrivning	Torktumlare
Spänning / Frekvens	220V-240V~/50Hz
Effekt	2700W
Kapacitet	7,0kg
Vikt (tom)	43kg
Mått (BxDxH mm)	595x565x845
Energiklass	B

2. Säkerhetsföreskrifter

Symboler

Var uppmärksam på dina plaggs märkning beträffande torktumling. Vissa material kan inte torktumlas och blir förstörda om så skulle ske.

 Dry	 Normal	 Not tumble dry normal	 Do not dry
 Line dry / hang to dry	 Drip dry	 Dry flat	 In the shade
 Dry clean	 Do not dry clean	 Dry clean normal cycle with any solvent	 Dry clean normal cycle petroleum solvent only

Säkerhetsanvisningar

För att förhindra eventuella skador på din och andras liv eller egendom , måste du följa säkerhetsanvisningarna.

1. Denna produkt tillhör kategori I elektriska apparater , och får endast användas för att torka textilier som har tvättats med vatten i hushållet. Var uppmärksam på säkerheten gällande strömkällan som används under operationen!
2. Strömanslutning med tillförlitlig jordning måste användas enligt lokala föreskrifter. Jordledning och nolledare (neutral) ska särskiljas och ska inte kopplas ihop.
3. Strömkabeln skall uppfylla nationell standard och vara dimensionerad för maskinens strömförbrukning. För att säkerställa din och din familjs säkerhet, låt en behörig installatör installera ett godkänt uttag om det befintliga inte uppfyller ovannämnda krav.
4. Torktumlaren skall inte användas om kemikalier har använts för rengöring.

5. Luddfiltret måste rengöras ofta .
6. Låt inte ludd och damm samlas runt torktumlaren.
7. Tillräcklig ventilation måste finnas för att undvika baksug av gaser in i rummet från andra värmekällor.
8. Torka inte otvättade plagg i torktumlaren .
9. Objekt som har fläckar som matolja , aceton , alkohol , bensin , fotogen , fläckborttagningsmedel, terpentin , vax och vaxborttagningsmedel bör tvättas i varmt vatten med en extra mycket tvättmedel innan de torkas i torktumlaren .
10. Artiklar som skumgummi (latex form) , duschmössor , vattentäta textilier , gummerade artiklar och kläder eller kuddar med skumgummi ska inte torkas i torktumlaren .
11. Sköljmedel , eller liknande produkter , skall användas som anges av instruktionen.
12. Den sista delen av ett torkprogram sker utan värme (avsvalning) för att säkerställa att kläderna lämnas i en temperatur säkerställer att objekten inte skadas.
13. VARNING : Stoppa aldrig en torktumlare innan slutet av torkningen om inte plaggen snabbt tas bort och sprids ut så att värmen leds bort.
14. Frånluften får inte släppas ut i en rökkanal som används för att evakuera rök från värmekällor med brinnande gas eller andra bränslen.
15. Apparaten får inte installeras bakom en låsbar dörr , en skjutdörr eller en dörr med gångjärn på motsatt sida till det av torktumlaren eller på sätt som hindrar en fullständig öppning av torktumlarens dörr.
16. Oljenedsmutsade poster kan självantända , speciellt när de utsätts för värmekällor såsom i en torktumlare . Föremålen blir varmt , vilket orsakar en oxidationsreaktion i oljan. Oxidation skapar värme . Om värmen inte kan fly , kan objekten bli varmt nog att självantända.
17. Om det är oundvikligt att tyger som innehåller vegetabilisk olja eller matolja eller har förorenats av hårvårdsprodukter placeras i en torktumlare bör de först sköljas i varmt vatten med extra tvättmedel - detta kommer att minska , men inte eliminera , risken
18. Apparaten får inte vältas under normal användning eller underhåll .
19. Avlägsna alla föremål ur fickor såsom tändare och tändstickor .
20. Denna apparat kan användas av barn från 8 år och uppåt om de fått nödvändiga instruktioner angående användning av apparaten på ett säkert sätt och förstår riskerna . Barn ska inte leka med apparaten . Rengöring och underhåll får inte göras av barn utan tillsyn.
21. Om nätkabeln är skadad , måste den bytas ut av tillverkaren, dess servicerepresentant eller liknande kvalificerade personer för att undvika fara .
22. Denna apparat är endast avsedd för inomhusbruk .
23. Öppningarna får inte blockeras.
24. Barn som är kortare än 3 år bör hållas borta eller kontinuerligt övervakas .
25. Håll husdjur borta från denna apparat .

Risk för elektrisk stöt

1. Dra inte i nätkabeln med kraft för att dra ut stickkontakten. Dra i kontakten.
2. Anslut inte eller dra i nätkontakten med våta händer .
3. Skada inte nätsladden och stickkontakten .

Personfara

1. Plocka inte isär och installera torktumlaren i någon undervisning eller handledning .
2. Stapla inte denna torktumlare på tvättmaskinen utan stapling kit .
3. Luta dig inte på den öppna dörren till torktumlaren .
4. Placera inte något som kan antända på maskinen , såsom stearinljus , elapparat .

Risk för maskinskada


1. Torka inte över angiven kapacitet .
2. Använd inte torktumlaren utan luddfilter i luckan.
3. Torka inte kläderna innan de centrifugeras .
4. Utsätt inte torktumlaren för direkt solljus.
5. Installera inte torktumlaren i fuktiga utrymmen.

6. Vid rengöring och underhåll , inte kom ihåg att dra ut stickkontakten och inte direkt tvätta torktummlaren med vatten .

Explosionsfara

Vänligen inte torka kläder med vissa brännbara ämnen såsom kol olja alkohol. Risk för att det kan bli en explosion .

3. Konstruktion

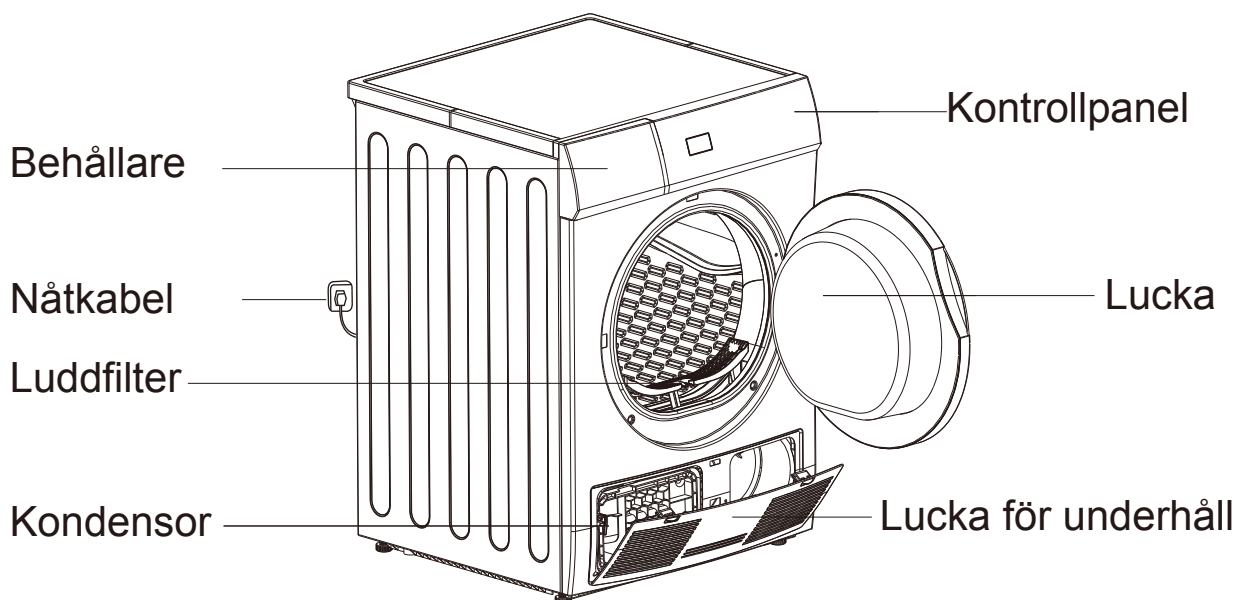


Tillbehör


Dessa delar är optioner för vissa maskinmodeller. Om din maskin har dem så installera enligt nedan.




Kondens-slang (option)

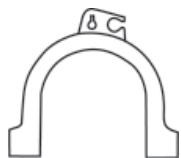

Slanghållare (option)

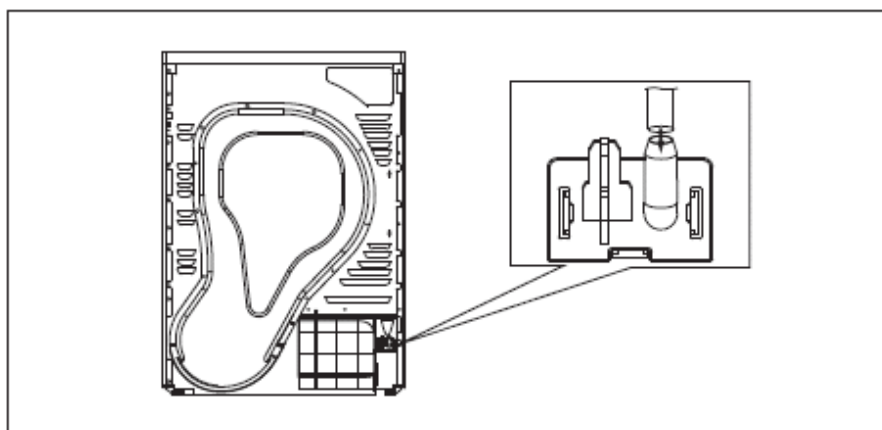

Snabbstart

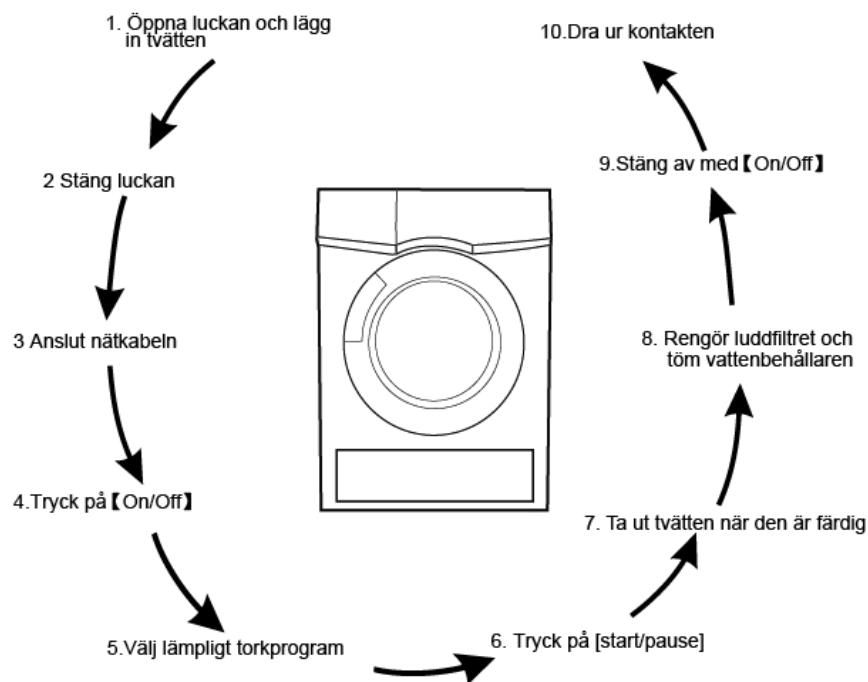


4. Installation

Transport

Flytta försiktigt. Håll inte någon framträdande delar av maskinen. Luckan kan inte användas som lyfthandtag.

Placering


1. Installera torktumlaren på en stadig och jämn yta.
2. Placera inte torktumlaren på lutande golv, mjuk matta eller trägolv.
3. Installera inte torktumlaren utomhus, för att förhindra att torktumlaren skadas.

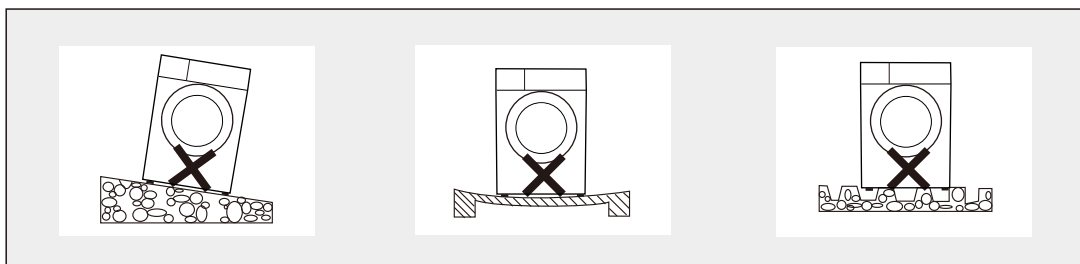

1. Nivåjustering

Om golvet är ojämnt, måste det justeras. Maskinen vibrerar och kan på ett lutande eller ojämnt golv flytta sig vid drift.

Använd verktyg för att justera höjden på maskinens fyra ben för att ställa torktumlaren plant.

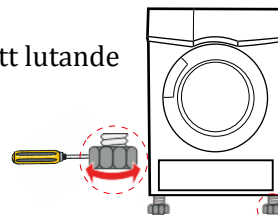

Nätanslutning

1. Se till att spänningen från nätet är densamma som den elektriska specifikationen av torken.
2. Anslut den till ett jordat uttag. Använd inte förlängningskabel eller adapterar.

5. Anvisningar & Råd

Observera












Damm och fett kan vara kvar i denna torkmaskin från tillverkning och transport. För att undvika nedsmutsning av dina kläder bör före den första användning följande göras:

1. Lägg några rena trasor i trumman .
2. Koppla in strömmen .
3. Tryck på " On / Off" -knappen , välj " Quick " -programmet och tryck på " Start / Paus " .

Efter avslutat program , följ " rengöring och underhåll " för att rengöra luddfiltret och luftkondensorn .


Råd

1. Före torkning , centrifugera tvätten noggrant i tvättmaskinen . Hög centrifugeringshastighet kan minska torktiden och sparar energi .
2. För enhetligt torkresultat , sortera tvätten enligt material och torkprogram .
3. Före torkning , vänligen stäng blixtlås , hakar och öljetter, knappar fram , knyt bälten etc.
4. Gör inte mer än torka kläderna , eftersom övertorkade kläder lätt kan få veck eller krympa .
5. Torka inte de artiklar som innehåller gummi eller liknande elastiskt material såsom regnrockar , regnskydd och fjäderprodukter .
6. Dörren kan öppnas först efter det att programmet är klart. Öppna inte luckan innan programmet avslutas , eftersom huden kan skållas av ånga eller het yta .
7. Rengör luddfiltret och töm behållaren efter varje användning för att undvika förlängning av torktid och ökad energiförbrukning .
8. Torka inte kläder efter de kemtvättats.
9. Vikten-referenser enligt följande :

 Blended Coats (about 800g)	 Jackets (about 800g in cotton)	 Jeans Trousers (about 800g)	 Towel Quilts (about 900g in cotton)
 Single Sheets (about 600g in cotton)	 Work Clothes (upper and lower) (about 1120g in cotton)	 Pajamas (about 200g)	 Shirts (about 300g in cotton)
 Undershirts (about 180g in cotton)	 Underpants (about 70g in cotton)	 Socks (about 30g in blended material)	

6. Användning

Kontrollpanel

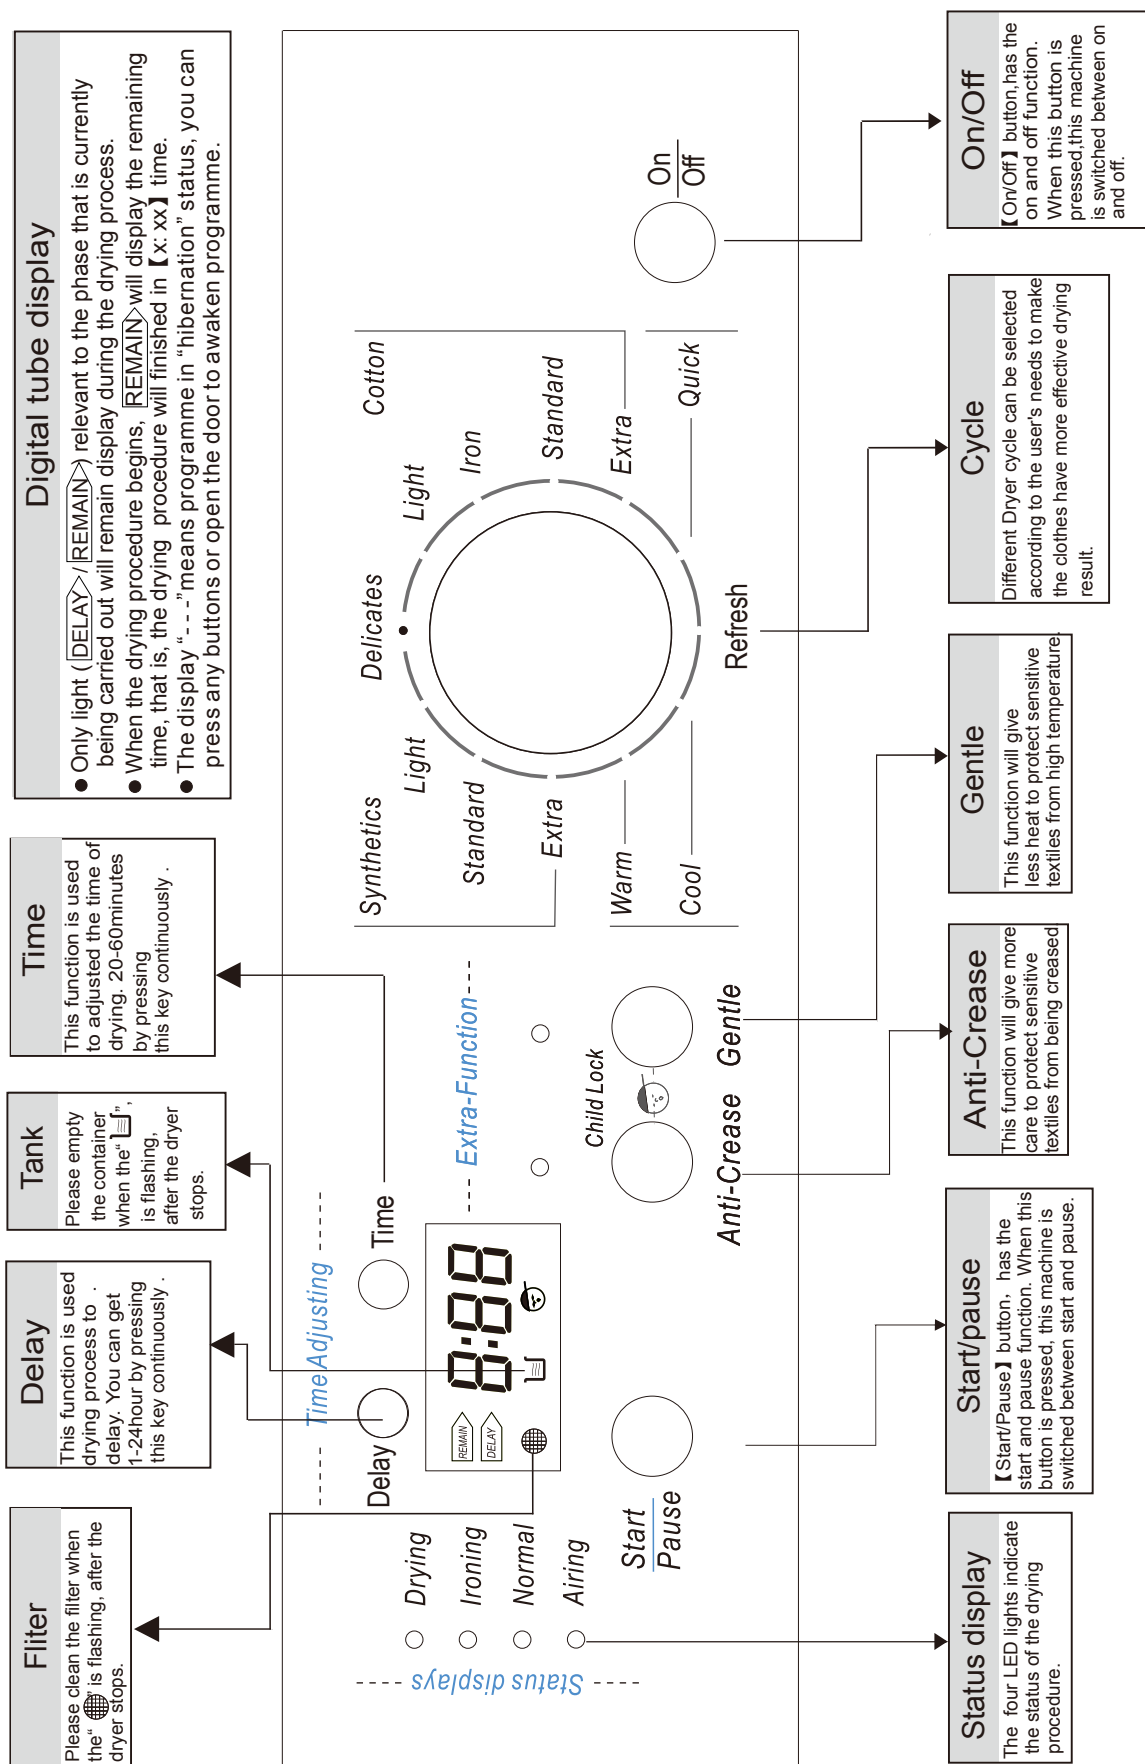

Programväljare

1. Tryck på 【 På / Av 】 knappen .
2. Vrid programvredet för att välja önskat program .
3. Välj 【 Delay 】 , 【 Anti - Crease 】 eller 【 Gentle 】 funktioner för ytterligare alternativ.
4. Tryck på 【 Start / Pause 】 knappen .

När torkningsproceduren är klar

Summern kommer att ljuda från torken när programmet är klart.

Tryck på On / Off -knappen för att slå av strömmen och dra ut strömkabeln .

Speciella funktioner

1 Fuktsensor

Denna funktion kan automatiskt känna av fukten i kläderna , och kommer automatiskt att justera tiden för torkning förfarande enligt hur mycket kläder du lägger in i torktumlaren .

Denna funktion kommer automatiskt att aktiveras under torkbehandlingen utom " Warm " , " Cool " och " Refresh " -programmet .

2 . Justering av tid

Med denna funktion kan du ställa in tiden för torkningsförfarandet själv. Tiden kan justeras från 20 till 60 minuter genom att trycka på " Time " -knappen . Denna funktion är avsedd för några små kläder , till exempel, en tvättlapp eller två par strumpor . Det är som att använda timer för att styra torkningen , men bara för " Warm " -programmet .

3 . Fördröjning av torkningsproceduren

Denna funktion används för att fördröja starten av torkning inom 24 timmar . Genom att trycka på denna knapp oavbrutet , kan du fördröja starten mellan 1 till 24 timmar . Fördröjningen innebär torkning förfarande inleds efter x : xx timmar . När fördröjningen påbörjas kommer skärmen endast att visa tidsfördröjningen start och blixtnär DELAY ikonen . Efter 30 sekunder , kommer DELAY ikonen att lysa och displayen visa " - " .

Stegen i detaljer

1. Lägg i tvätten och se till att luckan är stängd .
2. Tryck på 【 On / Off 】 knappen , för att sedan med programväljaren välja önskat program
3. Du kan välja 【 Anti - Crease 】 eller 【 Gentle 】 funktioner enligt dina behov .
4. Tryck på 【 Delay 】 tangenten.
5. Fortsätt att trycka på 【 Delay 】 att välja fördröjningstiden .
6. Efter 【 Start / Pause 】 knappen trycks , är torktumlare i driftsläge. Torkningsproceduren utförs automatiskt när fördröjningstiden passerat .
7. Om du trycker på 【 Start / Paus 】 knappen igen , kommer fördröjningen funktionen pausas .
8. Om du vill avbryta " Delay " -funktionen , tryck på 【 På / Av 】 knappen .

4 . Låsning av knappar

1. Denna maskin innehåller en speciell barnspärr , vilket kan hindra barnen från vårdslösa knapptryckningar och starta fel funktion .
2. När torktumlaren är i drifttillstånd , tryck 【 Anti - Crease 】 och 【 Gentle 】 knapparna samtidigt i över 3 sekunder för att aktivera knapplåset. När låset är aktiverat , kommer " Child Lock " -ikonen att lysa i displayen och ingen knapp kan påverkas utom 【 På / Av 】 knappen . När låset är aktiverat tryck på 【 Anti - Crease 】 och 【 Gentle 】 knapparna samtidigt i minst 3 sekunder för att avaktivera knapplåset.

5 .Anti-skrynkling

När skrynkelskydd-funktionen är vald , lyser lysdioden för skrynkelskydd, och trumman kommer att rotera intermitterande under torkprogrammet , för att säkerställa att känsliga textilier inte får veck.

6 Ömtåligt (Gentle)

När Gentle funktionen är vald , lyser Gentle-dioden, och programmet kommer att ge mindre värme för att skydda känsliga textilier för höga temperaturer , vilket kan skada textilier , såsom acetat , elasthan etc.

7 . Trumbelysning

För din bekvämlighet , kan denna funktion hjälpa dig att se bättre , när du öppnar luckan .


8 .Automatisk Skrynkelskydd

För att undvika att kläderna skrynklor efter avslutat program så kommer torktummlaren automatiskt att rotera intermittent i ca 2 timmar .

7. Rengöring och underhåll

Rengör luddfiltret

1. Låt torktummlaren svalna .
2. Öppna luckan .
3. Ta ut luddfiltret , dra uppåt för att ta ut det .
4. Rengör luddfiltret , torka av skrot trådar samlats på luddfiltret .
5. Sätt tillbaka luddfiltret

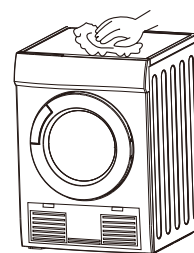





Observera!

1. Luddfiltret skall rengöras efter varje användning. Ludd samlat på filtret kommer att blockera luftcirkulationen, vilket kommer att orsaka en förlängning av torktid och energianvändning.
2. Dra ur nätkabeln före rengöring !
3. Använd inte torktummlaren utan luddfilter !
4. Rengör luddfiltret efter varje användning för att förhindra ludd ackumulering inuti torktummlaren .

Tvätta luftkondensor

Låt torktummlaren svalna . - Restvatten kan läcka, placera en absorberande trasa under underhåll luckan.

 1. Öppna underhåll luckan .
2. Öppen den helt.
3. Vrid de två låsspakarna mot varandra .
4. Ta ut luftkondensorn .
5. Rengör luftkondensorn, töm den grundligt .
6. Rengör tätningarna .
7. Sätt tillbaka luftkondensor
8. Vrid tillbaka båda låsspakarna .
9. Stäng underhållsluckan så att den låses på plats . Rengör luftkondensorn ofta om maskinen används frekvent.. Skada inte luftkondensorn !

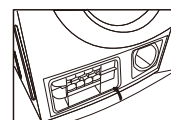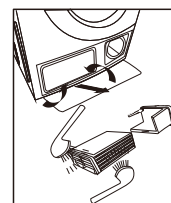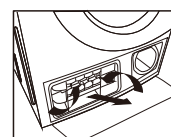


Varning

1. Rengör med varmt vatten bara, använd inte hårda / vassa föremål! Använd inte torktummlaren utan luftkondensor !
2. Under torkning kan vatten samlas mellan fönstret och tätningen , men detta påverkar inte funktionen

Töm vattenbehållaren

1. Håll och dra ut vattenbehållaren med båda händerna ;
2. Dra ut dräneringsröret ;
3. Luta vattenbehållaren och håll ut det kondenserade vattnet ;
4. Skjut tillbaka dräneringsröret och sätt tillbaka behållaren.

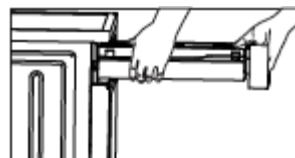

Varning

1. Töm vattenbehållaren efter varje användning. Programmet kommer att pausas och ikonen "☰" blinkar när vattenbehållaren är full under torkningsprocessen . Efter att behållaren töms , kan torkningen startas genom att trycka 【 Start / Paus 】 knappen .
2. Drink inte kondensvatten .





8. Felsökning

Endast en behörig tekniker kan utföra reparationer. Du kan enkelt lösa många vanliga problem och spara kostnaden för en eventuell service. Prova förslagen nedan för att se om du kan lösa eventuella problem innan du ringer efter service.

Problem	Solution
• Displayen lyser inte	<ul style="list-style-type: none">• Nätkabeln ej ansluten• Kontrollera om program är valt• Kontrollera om säkringen är hel
• "☰" Blinkar	<ul style="list-style-type: none">• Töm vattenbehållaren• Kontrollera slangen för kondensutlopp
• "🌐" Blinkar	<ul style="list-style-type: none">• Rengör luftkondensorn• Rengör luddfiltret
Maskinen startar • inte	<ul style="list-style-type: none">• Kontrollera att startknappen har tryckts• Kontrollera om luckan är stängd• Kontrollera om program har valts
• Vattenläckage	<ul style="list-style-type: none">• Se till att maskinen står horisontellt• Gör rent luftkondensorn och lucktätningssr
• Luckan öppnas	<ul style="list-style-type: none">• Kontrollera att inte för mycket kläder lagts in• Stäng luckan så att låses med ett "klick"
• Luftfuktigheten i rummet ökas märkbart	<ul style="list-style-type: none">• Ventilera rummet ordentligt• Gör rent ventilgallret• Kontrollera att kondensorn är rätt insatt
• Tvätten blir inte torr eller torktiden blir för lång	<ul style="list-style-type: none">• Gör rent luddfilter och luftkondensorn• Töm vattenbehållaren• Kontrollera vattenutloppet• Torkarinstallationen för begränsad• Rengör fukt sensorn• Använd närmast högre program eller använd tidsprogram

Om ovanstående metoder inte hjälper, kontakta serviceavdelning för hjälp utan dröjsmål.

Felkoder

Alarm kod	Orsak	Ljud Alarm	Åtgärd
“  ” Blinkar	Vattentank full eller pumpfel		Kontrollera vattentank och pump
“  ” Blinkar	Luftflödet blockerat		Kontrollera filter och luftflöde
“ E30 ”	Värmeproblem	Felkoden blinkar i displayen och summern ljuder varje kvart	Kontrollera värmare och termostat
“ E32 ”	Fukt-sensorfel		Kontrollera fuktsensor och PCB
“ E33 ”	Temperatur-sensorfel		Kontrollera främre temperatur-sensor
“ E34 ”			Kontrollera bakre temperatur-sensor
“ E60 ”	Motor fel		Kontrollera motor och PCB


9. Garantivillkor

Garantitiden för denna produkt är 1 år från och med inköpsdatum. Under denna period repareras alla defekter i material eller utförande kostnadsfritt. Följande villkor gäller rörande denna garanti:

1. Vi tillbakavisar uttryckligen alla övriga ersättningskrav, inklusive ersättning för följdskador.
2. Garantin förlängs inte i samband med reparationer eller byten av delar som sker inom garantiperioden.
3. Om produkten modifieras, tillförs delar som inte är original eller repareras av en tredje part gäller inte garantin längre.
4. Garantin gäller endast om daterat köpebevis i original visas upp och om detta köpebevis inte innehåller några ändringar.
5. Garantin täcker inte skador som uppstått genom hantering som inte är i enlighet med bruksanvisningen, försummelse eller skadegörelse
6. Köparen står för transportkostnader och ansvarar för eventuella risker i samband med att produkten eller dess delar förflyttas.





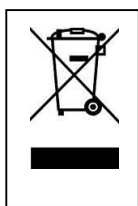




För att undvika onödiga kostnader rekommenderar vi att du alltid först läser igenom bruksanvisningen noga. Om denna inte erbjuder någon lösning bör du ta med produkten till återförsäljaren för reparation.

10. Miljöskydd



När apparaten inte längre fungerar måste den kasseras på ett sådant sätt att den skadar miljön i minsta möjliga mån och i enlighet med de regler som gäller i din kommun.

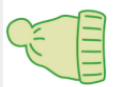11. Programtabell

																
Programme	Weight(max)	T-Shirt	Shirts	Trousers	Skirts/ dresses	Sportswear	Work clothes	Anorak	Towelling bathrobe	Underwear	Socks	Bed linen	Table linen	Terry towels	Tea towels/ hand towels	
Cotton	For cottons and coloureds made of cotton or linen.															
	Light	●		●	●	●			●		●	●			●	
	Standard								●	●				●	●	
	Iron								●	●	●			●	●	
	Extra							●			●		●	●	●	
Synthetics	For non-iron washing made of synthetic and blended fabrics,cotton.															
	Light		●	●	●	●	●									
	Standard		●			●										
	Extra							●				●	●			
Delicate		For machine-washable woollen textiles.Textiles are fluffier,but not dried. Remove and hang up textiles when the programme ends.														
Warm/Cool (20min/30min)		For timer programme , delicate textiles made of acrylic fibres or small items. Using 【Time 】 function to adjust 【Wram】 time.														
Quick		For washing which is to be dried quickly, e.g. made of acrylic fibres or for individual small items. Also for subsequent drying.														
Refresh		For refreshing or gertly cleaning textiles with commercially available dry cleaning products.														

EU-information

Varumärke : TecLime
Modell: TTD-7
Nominell kapacitet : 7kg
Torktumlare Typ : Kondensator
Energiklass : B

Energiförbrukning 502.0kWh per år , baserad på 160 torkcykler standard program för bomull vid full och dellast och användning av energisparlägen. Den faktiska energiförbrukningen per cykel beror på hur maskinen används .

Automatiska eller icke - automatiska : Automatisk
EU Ecolabel : N / A

Energiförbrukning för standard bomull vid full belastning: 4.24 kWh
Energiförbrukning för standard bomull vid dellast : 2.29 kWh

Strömförbrukning i frånläge (Po) : 0,28 W
Strömförbrukning i viloläge (Pl) : 1,72 W
Varaktighet viloläge : 10 min

Det standardprogram för bomull som används vid full och dellast som refereras till är det program är lämpligast för torkning av normal våt bomullstvätt och det är det mest effektiva programmet när det gäller energiförbrukning för bomull .

Vägd programtid för standard bomull vid full och dellast : 112 min
Programtid för standard bomull vid full belastning: 140 min
Programtid för standard bomull vid dellast : 85 min
Kondenseffekt A på en skala från G (minst effektiv) till A (effektivast) .
Genomsnittlig kondenseffektivitet standard bomull vid full belastning: 80,2 %
Genomsnittlig kondenseffektivitet standard bomull vid dellast : 80,9 %
Vägd kondenseffektivitet för standard bomull vid full och dellast : 80,6 %

Ljudeffektnivå för standard bomull vid full belastning: 69dB

Directions for Use (GB)

Please read the instructions carefully before using the product and keep it for future reference.













1. Specification

Modell nr.	TTD-7
Description	Tumble Dryer
Voltage / Frequency	220V-240V~/50Hz
Power	2700W
Capacity	7,0 kg
Weight	43kg
Size (WxDxH mm)	595x565x845
Energy class	B

2. Safety information

Dry care symbols

Please pay attention to use the drying machine if the materials of your clothes cannot be dried by it or contain the symbols as follows:

 Dry	 Normal	 Not tumble dry normal	 Do not dry
 Line dry / hang to dry	 Drip dry	 Dry flat	 In the shade
 Dry clean	 Do not dry clean	 Dry clean normal cycle with any solvent	 Dry clean normal cycle petroleum solvent only

Safety notes

To prevent any damages to your and others' life or property, you have to follow the safety notes.

1. This product belongs to Category I electrical appliances, and only for drying textiles which have been washed with water in the household. Please pay attention to the safety of power use during the operation!
2. The power source with reliable earthing must be used. Its earth wire must be buried under the ground and shall not be connected with the public utilities such as city water pipe or gas pipe etc. The earth wire and null wire shall be distinguished and shall not be connected together.
3. The power wire shall be met national standard and must be able to withstand the current above 16A. To ensure your and your family's safety, please make improvement immediately if any power use at your home does not comply with the abovementioned requirements.
4. The tumble dryer is not to be used if industrial chemicals have been used for cleaning.
5. The lint trap has to be cleaned frequently.
6. Lint must not to be allowed to accumulate around the tumble dryer.
7. Adequate ventilation has to be provided to avoid the back flow of gases into the room from appliance burning other fuels, including open fires.
8. Do not dry unwashed items in the tumble dryer.

9. Items that have been soiled with substance such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with a extra amount of detergent before being dried in the tumble dryer.
10. Items such as foam rubber (latex form), shower caps, waterproof textiles, and rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
11. Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
12. The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
13. **WARNING:** never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
14. The exhaust air must not be discharged into a flue, which is used for exhausting fumes from appliance burning gas or other fuels.
15. The appliance must not be install behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer. In such a way that a full opening of the tumble dryer door is restricted.
16. Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
17. If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent-this will reduce, but not eliminate, the hazard
18. The appliance should not be overturned during normal use or maintenance.
19. Remove all objects from pockets such as lighters and matches.
20. Children aged from 8 years and above can use this appliance if they by persons with them have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
21. If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
22. This appliance is for indoor use only.
23. The openings must not be obstructed by a carpet or similar.
24. Children of less than 3 years should be kept away unless continuously supervised.
25. Keep pets away from this appliance.

Electric shock hazard

1. Do not draw the power cord forcefully to pull out the mains plug.
2. Please do not plug/draw the mains plug with wet hands.
3. Do not damage the power cord and the power plug.

Injury danger

1. Do not disassemble and install the dryer under no instruction or supervision.
2. Do not stack this dryer on washing machine without stacking kits.
3. Do not lean on the opened door of the dryer.
4. Do not put any pyrotoxin on the dryer, such as candles, electric cooker.

Damage danger


1. Do not dry over the rated capacity.
2. Do not operate the dryer without the filter door and filter base.
3. Do not dry the clothes before being spun.
4. Do not expose the dryer directly under the sun, and indoor use only.
5. Do not install the dryer in the humid and drenching environment.

6. At the cleaning and maintenance, please do remember to pull out the power plug and do not directly wash the dryer with water.

Explosion danger

Please do not dry the clothes with some flammable substances such as the coal oil alcohol or there will be the explosion.

3. Design

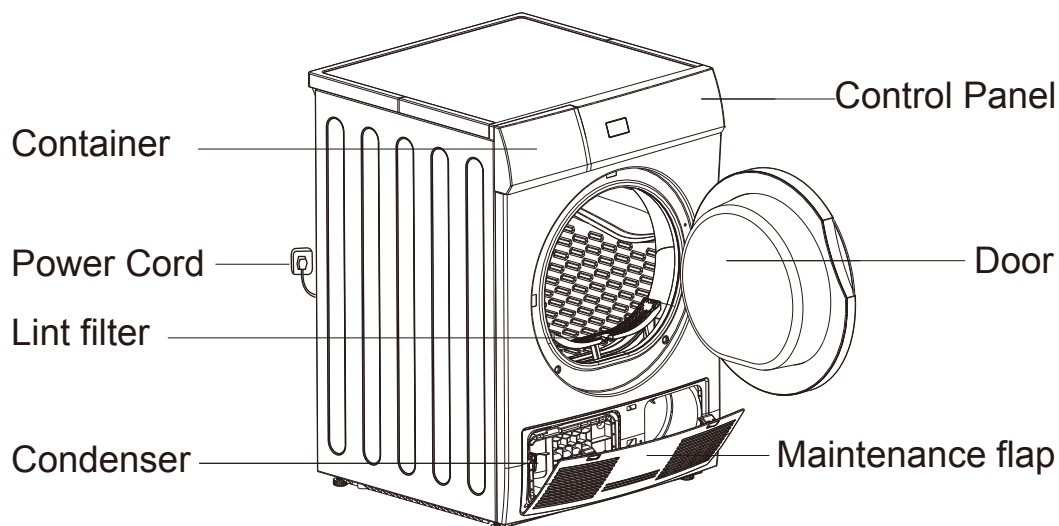


Accessories


The following parts are optional for specific models. If your dryer has following parts, please install them following the instruction below.




Condensing drain hose (optional)

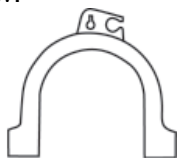

Hose holder (optional)

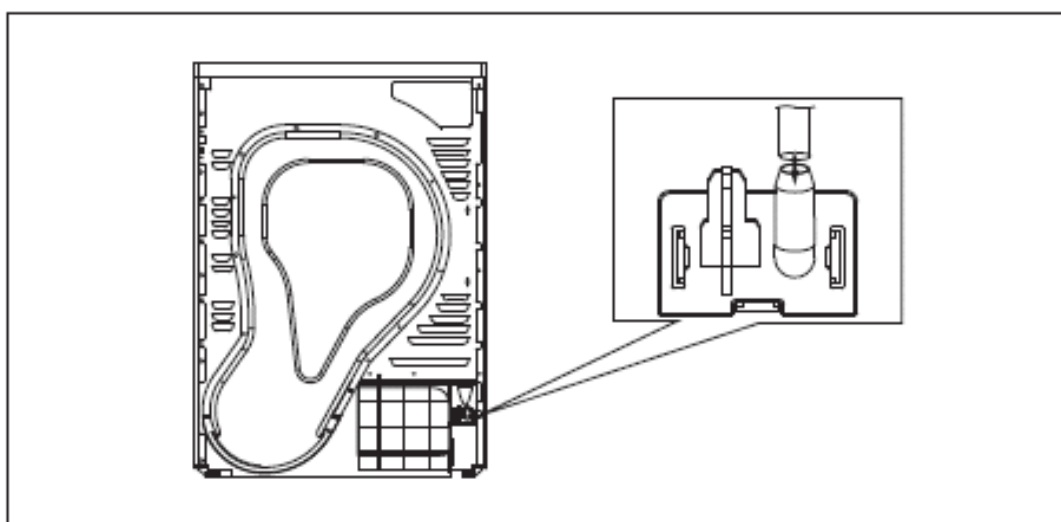

Quick start

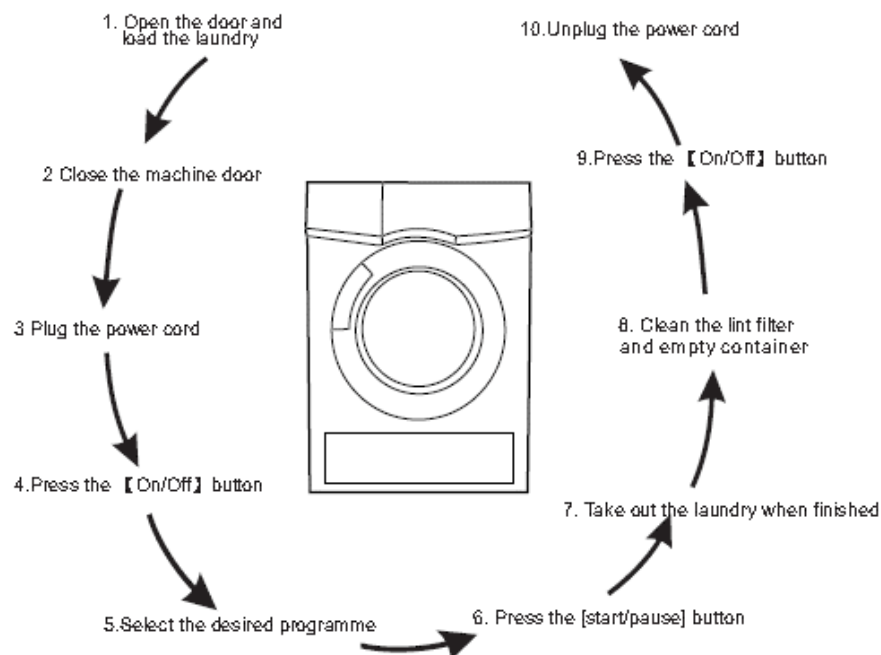


4. Installation

Transport

Move cautiously. Do not grasp any salient parts of machine. The machine door cannot be used as handle for delivery


Installation position

1. Please install the dryer on solid and flat ground.
2. Please do not place the dryer on the slope, soft carpet or wooden floor.
3. Please do not install the dryer outdoors, to prevent the dryer from being frozen to damage of machine parts.

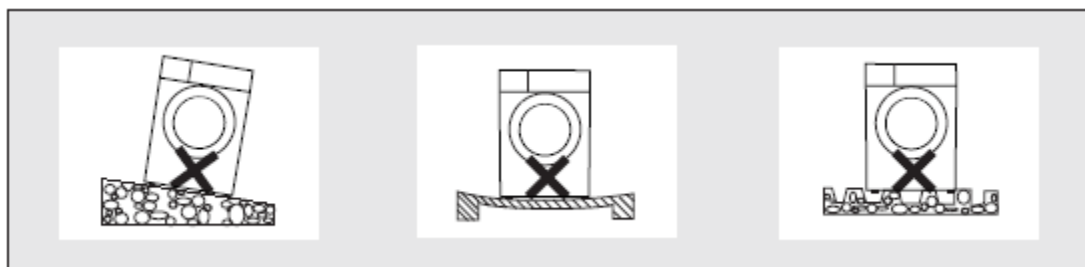

Level adjusting

If the floor is obviously uneven, it needs to be adjusted. It vibrates the machine, causing machine to move from its position. Using tools to adjust the height of four machine legs to adjust the levelness of this dryer.

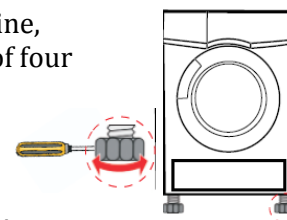

Power supply connection

1. Make sure that the voltage of the power supply is the same as the electric specification of the dryer.
2. Please do not connect it with the power connection board, the universal plug or socket

5. Attention &Advice












Attention

Before the first cycle, the dust and grease may remain in this dryer during the period of manufacture and transportation, to avoid contaminating your clothes,

1. Put some clean rags into the drum.
2. Plug in the power.
3. Press "On/Off" button, select the "Quick" program, and press "Start/Pause".
4. After finishing this program, please follow the "cleaning and routine maintenance" to clean the lint filter and air condenser.


Advice

1. Before drying, thoroughly spin the laundry in washing machine. High spin speed can reduce the drying time and save energy consumption.
2. For uniform drying result, sort the laundry according to fabric type and drying program.
3. Before drying, please close zips, hooks and eyelets, button up, tie fabric belts, etc.
4. Do not over dry the clothes, because over dried clothes can easily get creases or shrinkage.
5. Do not dry the articles containing rubber or similar elastic materials such as raincoats, bicycle covers and feather products.
6. The door can be opened only after the program of the drying machine is completed. Do not open the door before the program finished, as the skin may be scalded by steam or hot surface.
7. Clean the lint filter and empty container after each use to avoid extension of drying time and energy consumption.
8. Do not dry these clothes after dry-clean process
9. The weight references as follows:

 Blended Coats (about 800g)	 Jackets (about 800g in cotton)	 Jeans Trousers (about 800g)	 Towel Quilts (about 900g in cotton)
 Single Sheets (about 600g in cotton)	 Work Clothes (upper and lower) (about 1120g in cotton)	 Pajamas (about 200g)	 Shirts (about 300g in cotton)
 Undershirts (about 180g in cotton)	 Underpants (about 70g in cotton)	 Socks (about 30g in blended material)	

6. Operation

Control Panel

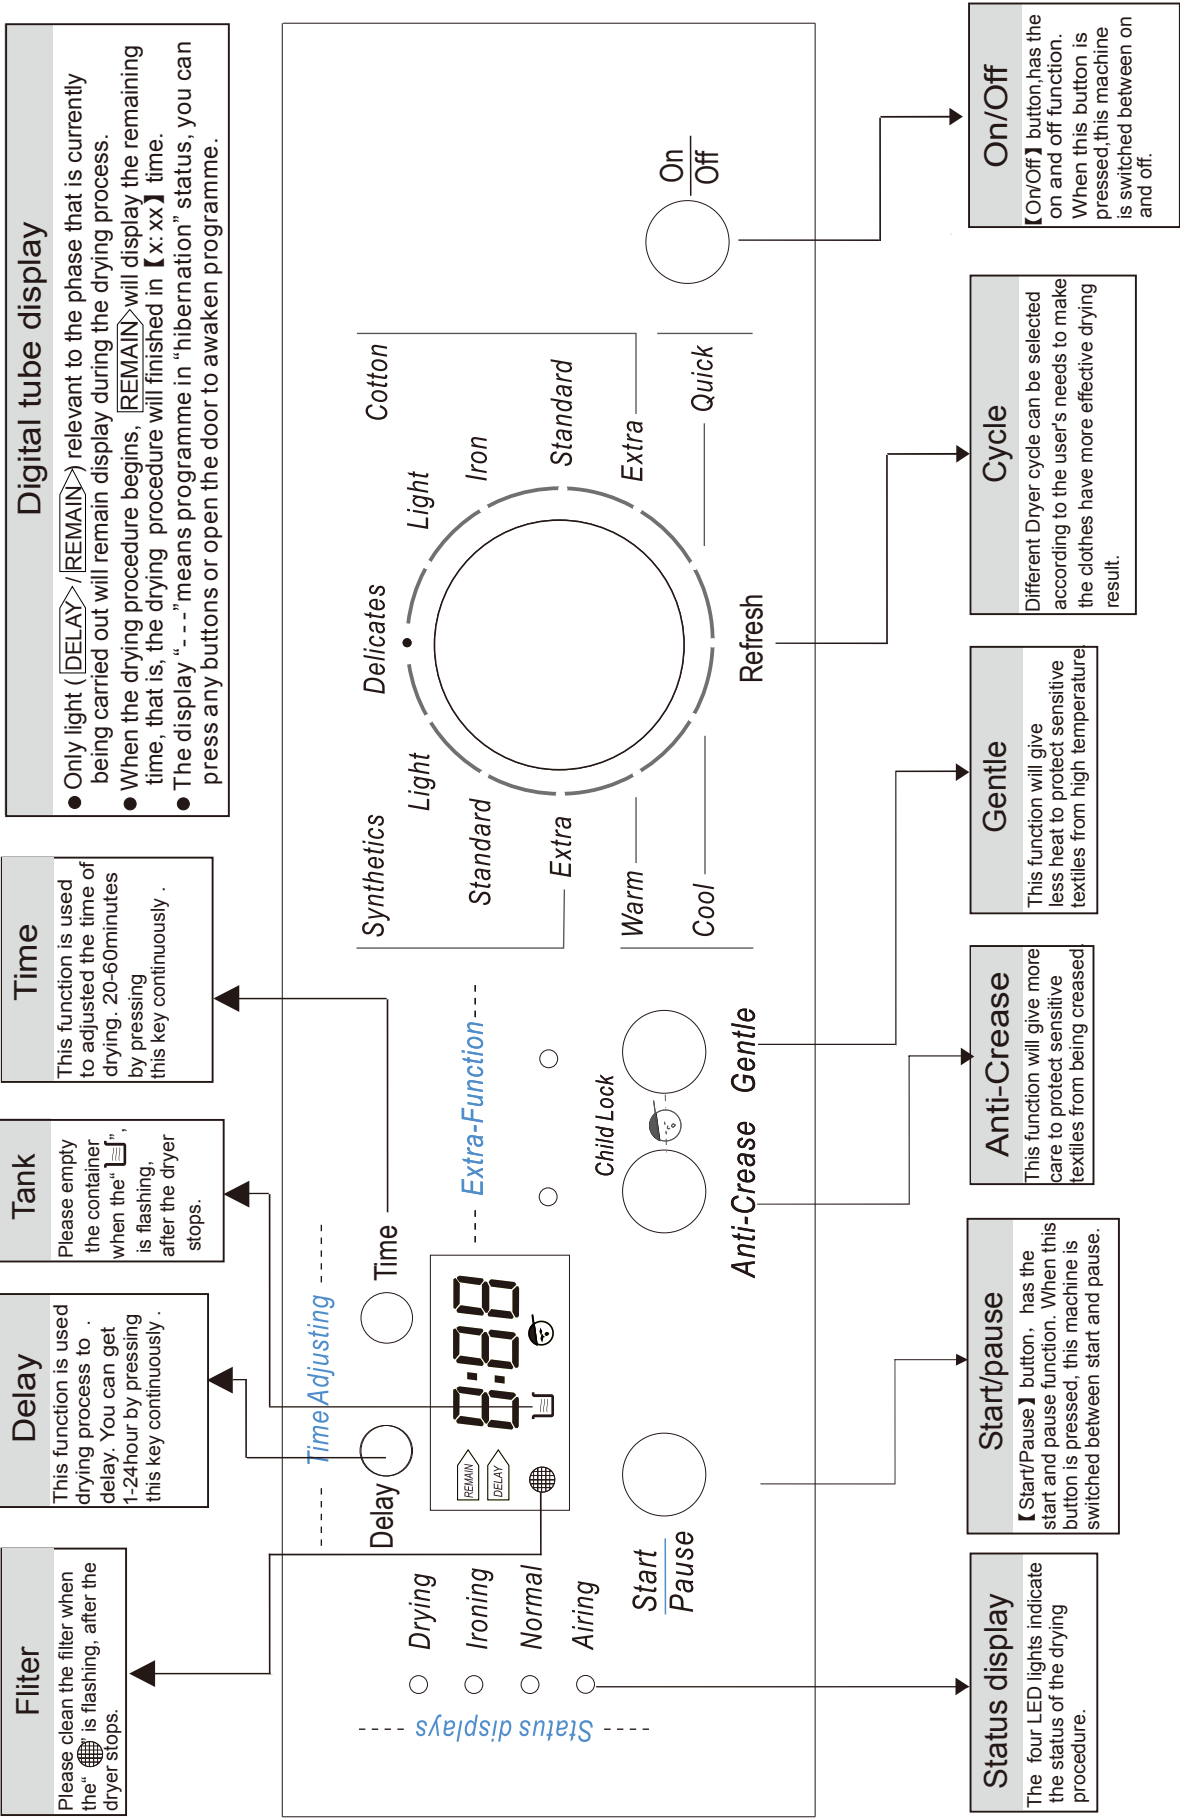

Program selector

1. Press the **【On/ Off】** button.
2. Rotate the program knob to select the desired program.
3. Select the **【Delay】** , **【Anti-Crease】** or **【Gentle】** functions for additional option.
4. Press the **【Start/Pause】** key.

The Drying procedure stops

The buzzer will prompt from the dryer when finishing the cycle. Press the On/Off button to turn down the power, and pull out the power cable.

Special drying function

1. Moisture sensor

This function can automatically sense the moisture of clothes, and will automatically adjust the time of drying procedure according to how much clothes you put into the dryer.

This function will automatically activate during the drying procedure except the “Warm”, “Cool” and “Refresh” program.

2. Additional time function

With this function, you can set the time of drying procedure by yourself; the time can be adjusted from 20 to 60 minutes by pressing “Time” button. This function is designed for few small clothes, for example, one facecloth or two pairs of socks. Special it is like using timer to control drying process, but only for “Warm” program.

3. Delay drying procedure

This function is used to delay clothes drying within 24 hours. By pressing this key continuously, you can delay the start from 1 to 24 hours. The delay time means drying procedure will start in x:xx hours. When the delay procedure starts, the display will only show the delay start time and flash DELAY icon. After 30s, the display will light DELAY icon and show “-”.

Steps in details

1. Load your laundry and make sure the machine door is closed.
2. Press the **【On/Off】** button, then to turn the program selector knob and select desired program
3. You can select the **【Anti-Crease】** or **【Gentle】** functions according to your need.
4. Press the **【Delay】** key.
5. Continue to press the **【Delay】** to select the delay time.
6. After the **【Start/Pause】** key is pushed, the Dryer is at the run condition. The drying procedure will be automatically performed when the delay time is over.
7. If you push the **【Start/Pause】** button again, the delay function will be paused.
8. If you want to cancel the “Delay” function, please press the **【On/Off】** button.

4. Child safety feature

1. This machine incorporates a special child safety lock, which can prevent children from carelessly pressing keys or making the faulty operation.
2. When the dryer is at the operation state, press the **【Anti-Crease】** and **【Gentle】** buttons at the same time for over 3 seconds to start child lock function. When child lock function is set, the display will light “Child Lock” icon and no key can effect to the dryer except **【On/Off】** button. Under the start state of the child lock button, the **【Anti-Crease】** and **【Gentle】** buttons shall be pressed at the same time for over 3 seconds to release the child lock function.

5. Anti-Crease function

When the anti-crease function is selected, the LED of anti-crease shall illuminate, and the drum will intermittent rotate during the drying program, in order to give more care to ensure the sensitive textiles cannot get crease.

6. Gentle function

When the Gentle function is selected, the LED of Gentle shall illuminate, and the program will give less heat to protect sensitive textiles from high temperature, which may harm to these textiles, such as acetate, elastane etc.

7. Drum light

For your convenience, this function can help you to see clearly, when you open the machine door.

8. Auto Anti-crease function


To avoid the clothes creasing after the program finished, the dryer will automatically intermittent rotate about 2 hours.

7. Cleaning and maintenance

Clean the lint filter

Leave the dryer to cool down.

1. Open the machine door.
2. Take out the lint filter, pull upward to take it out.
3. Clean the lint filter; wipe off the scrap threads accumulated on the lint filter.
4. Reinstall the lint filter.

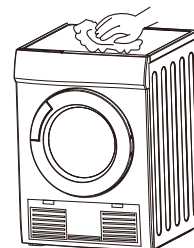





NOTE!

1. The lint filter accumulated on the filter will block the air circulation, which will cause the extension of drying time and energy use; therefore, the scrap thread filter shall be cleaned after each use.
2. Do disconnect the power cord before cleaning!
3. Do not operate the dryer without the lint filter!
4. Clean the lint filter after each use to prevent lint accumulation inside the dryer.

Wash air condenser

-Leave the dryer to cool down. -Residual water may escape, place an absorbent cloth under the maintenance flap.

1. Unlock the maintenance flap.
2. Completely open maintenance flap.
3. Screw both locking levers towards each other.
4. Pull out the air condenser.
5. Clean the air condenser completely, drain thoroughly.
6. Clean the seals.
7. Re-insert the air condenser handle at the button!
8. Unscrew both locking levers.
9. Close the maintenance flap until it locks into position. Please clean the air condenser if frequently used. Do not damage the air condenser!

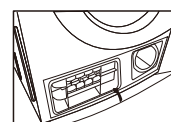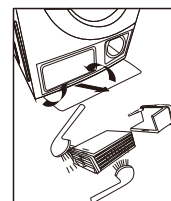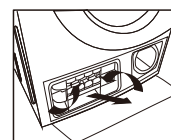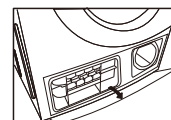


Warning

1. Clean with warm water only; do not use hard/sharp-edged objects! Do not operate the dryer without the air condenser!
2. During drying, water may collect between the window and the seal, but this does not affect the function of your dryer!

Empty the water container

1. Hold and pull out the water container with two hands;
2. Pull out the drain tube;
3. Tilt the water container, pour out the condensed water;
4. Push the drain tube back and insert the container.

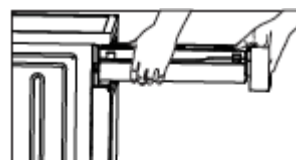

Warning

1. Empty the water container after each use, the program will be paused and the "💧" icon will flash if the water container is full during the drying process. After the container emptied, the dryer can be restarted by pushing 【Start/Pause】 button.
2. Do not drink the condensed water.



8. Troubleshooting

Only authorized technicians can carry out repairs. You can easily solve many common problems and save the cost of a possible service. Try the suggestions below to see if you can solve any problem before calling for service.

Problem	Solution
● Display does not come on	<ul style="list-style-type: none">● The mains plug is inserted.● Check the programme selected.● Check fuse in the house.
● "💧" Is flashing	<ul style="list-style-type: none">● Empty condensation container.● If failure, check hose for condensation outlet.
● "🌀" Is flashing	<ul style="list-style-type: none">● Clean air cooler.● Clear lint filter.
● Dryer does not start	<ul style="list-style-type: none">● Check the start button has selected .● Check the the door has closed.● Check the programme has set.
● Water is running out	<ul style="list-style-type: none">● Align dryer horizontally.● Clear air condenser and door seals.
● Door is open by itself	<ul style="list-style-type: none">● Press door until it "clicks"into position.● Check the clothes is over load .
● Humidity in the room is increase significantly	<ul style="list-style-type: none">● Ventilate room adequately.● Clean the cool grille.● Ensure that the air condenser has been inserted.
● Degree of dryness was not reached or drying time too long	<ul style="list-style-type: none">● Clean lint filter and wash condenser.● Empty container.● Check water outlet.● Dryer installation too restricted.● Clean the moisture sensors.● Use next higher drying programme or using● Timer programme.

If you cannot deal with the fault by yourself and need help: Press the 【On/Off】 button. Pull out the mains plug and call the service.

Alarm function

Alarm Problem	Alarm Reason	Buzzer Alarm	Release
"  "Is flashing	Water tank full or pump error		Check the water tank and pump.
"  "Is flashing	Air flow block		Check the filter and the air flow
" E30 "	Heater problem	The Error Code is flashing on X:XX at Flash Rate 1. Meanwhile the beep is sounded every 15 minutes.	Check the heater and the thermostat
" E32 "	Humidity sensor error		Check the Humidity sensor and PCB
" E33 "	Temperature sensor error		Check the front temperature sensor
" E34 "			Check the rear temperature sensor
" E60 "	Motor error		Check the motor and the PCB


9. Warranty Provisions

This product comes with a 12-month warranty starting on the date of purchase. Within this period any defects in material or workmanship will be repaired without any charge. The following provisions shall apply regarding this warranty:

1. We expressly dismiss all other claims for damage, including consequential damages;
2. Any repairs or replacements of components within the term of the warranty will not result in an extension of the term of the warranty;
3. The warranty will no longer apply if the product has been modified, non-original parts have been used, or if it has been repaired by third parties;
4. The warranty will only apply, when you present the original, dated proof of purchase, provided no changes have been made to it;
5. The warranty will not apply to damage caused by actions not in compliance with the Directions for Use, neglect, vandalism;
6. Transportation costs and the risk involved during the transportation of the product or its components will always be the responsibility of the purchaser.





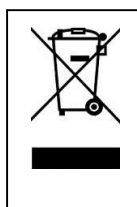





In order to avoid unnecessary costs, we recommend that you always read the Directions for Use carefully first. If they offer no solution, please take the product to your dealer for repair.

10. Environmental Protection



 Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

 11. Program table

																
Programme	Weight(max)		T-Shirt	Shirts	Trousers	Skirts/ dresses	Sportswear	Work clothes	Anorak	Towelling bathrobe	Underwear	Socks	Bed linen	Table linen	Terry towels	Tea towels/ hand towels
Cotton	7.0kg		●		●	●	●			●		●	●			●
										●	●			●	●	
										●	●	●			●	●
									●			●		●	●	●
Synthetics		3.5kg			●	●	●	●								
					●			●								
										●			●	●		
Delicate		3.0kg	For machine-washable woollen textiles.Textiles are fluffer,but not dried. Remove and hang up textiles when the programme ends.													
Warm/Cool (20min/30min)		3.0kg	For timer programme , delicate textiles made of acrylic fibres or small items. Using 【 Time 】 function to adjust 【Wram】 time.													
Quick		3.0kg	For washing which is to be dried quickly, e.g. made of acrylic fibres or for individual small items. Also for subsequent drying.													
Refresh		1.0kg	For refreshing or gently cleaning textiles with commercially available dry cleaning products.													

EU-information

Brand name: TecLime

Model: TTD-7

Rated capacity: 7kg

Dryer Type: Condenser

Energy efficiency class: B

Energy consumption 502.0kWh per year, based on 160 drying cycles of the standard cotton program at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used.

Automatic or non- automatic: Automatic

EU Ecolabel: N/A

Energy consumption of the standard cotton program at full load: 4.24 kWh

Energy consumption of the standard cotton program at partial load: 2.29 kWh

Power consumption of the off-mode (Po): 0.28 W

Power consumption of the left-on mode (Pl): 1.72 W

Duration of the left-on mode: 10 min

The 'standard cotton program' used at full and partial load is the standard drying program to which the information in the label and the fiche relates, that this program is suitable for drying normal wet cotton laundry and that it is the most efficient program in terms of energy consumption for cotton.

Weighted program time of the standard cotton program at full and partial load: 112 min

Program time of the standard cotton program at full load: 140 min

Program time of the standard cotton program at partial load: 85 min

Condensation efficiency class B on a scale from G (least efficient) to A (most efficient).

Average condensation efficiency of the standard cotton program at full load: 80.2%

Average condensation efficiency of the standard cotton program at partial load: 80.9%

Weighted condensation efficiency for the standard cotton program at full and partial load: 80.6%

Sound power level for the standard cotton program at full load: 69dB